




HOW TO ...

Power Lock II: Fixing packed size

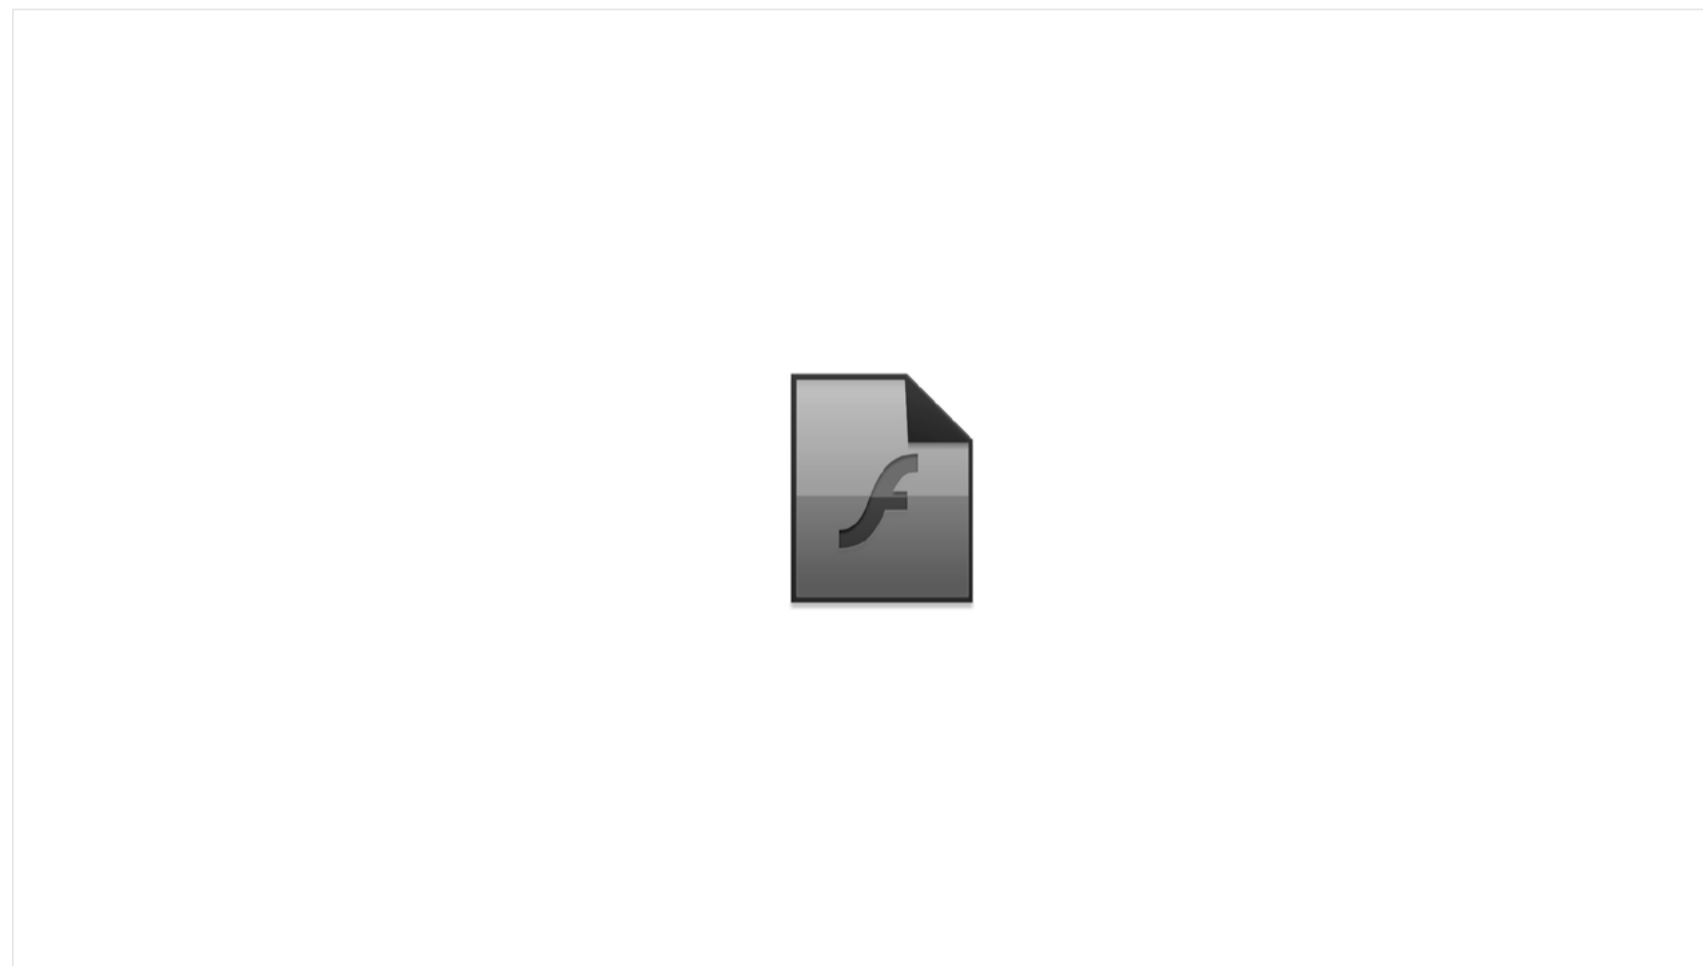

Insert the lowest pole section until it will go no further. Then, lock the Power Lock, thus locking the pole at its packed size and preventing unwanted movement.

Note: To exit fullscreen mode press ESC
In case of any problems with video,
[please download the latest version of the Adobe Reader](#)

Should you have any questions concerning the product, please contact: **KOMPERDELL Sportartikel GesmbH | Wagnermühle 30 | 5310 Mondsee | AUSTRIA | Tel.: +43 / 6232 / 4201-0 | Fax.: +43 / 6232 / 3545 | E-Mail: sales@komperdell.com**
3 years free repair service for our telescopic poles, without queries – only available with us. Visit our website: www.komperdell.com

